

USER'S MANUAL FOR DL SERIES HOTEL SAFE

1) Master code: 3 digits (factory setting: 159). You can use the master code to open the safe under any situation. The master code can be changed upon your requirement.

2) Personal code: 1-10 digits. The guest can set the personal code within 10 digits.

3) Operation (The safe can not be locked before input the personal code under opening situation)

Install 4 AA batteries into the external battery case, plug in the outlet on the faceplate, input factory setting personal code or master code, when press the button there will be a beep.

1、 Lock the door

Press “B”, the yellow light on. Then input personal code (1-10 digits) and press “B” again, the yellow light off. When the green light on, turn the knob in anti-clockwise to lock the safe.

2、 Opening

Input personal code, press “A”. When the green light on, turn the knob in clockwise to open the safe.

Please repeat the operation 1 & 2 when you use the safe again.

4) Change master code (For the manager of hotel):

under opening situation, input original master code and press “A” , yellow light on, you can input a new master code(1-10 digits); then press “B”; the yellow light off that indicates the master code has been changed.

5) Emergency opening:

If forget personal code or other reasons make the safe can't be opened, you can use override master code to open the door.